


**ACTIVATION SWITCH**

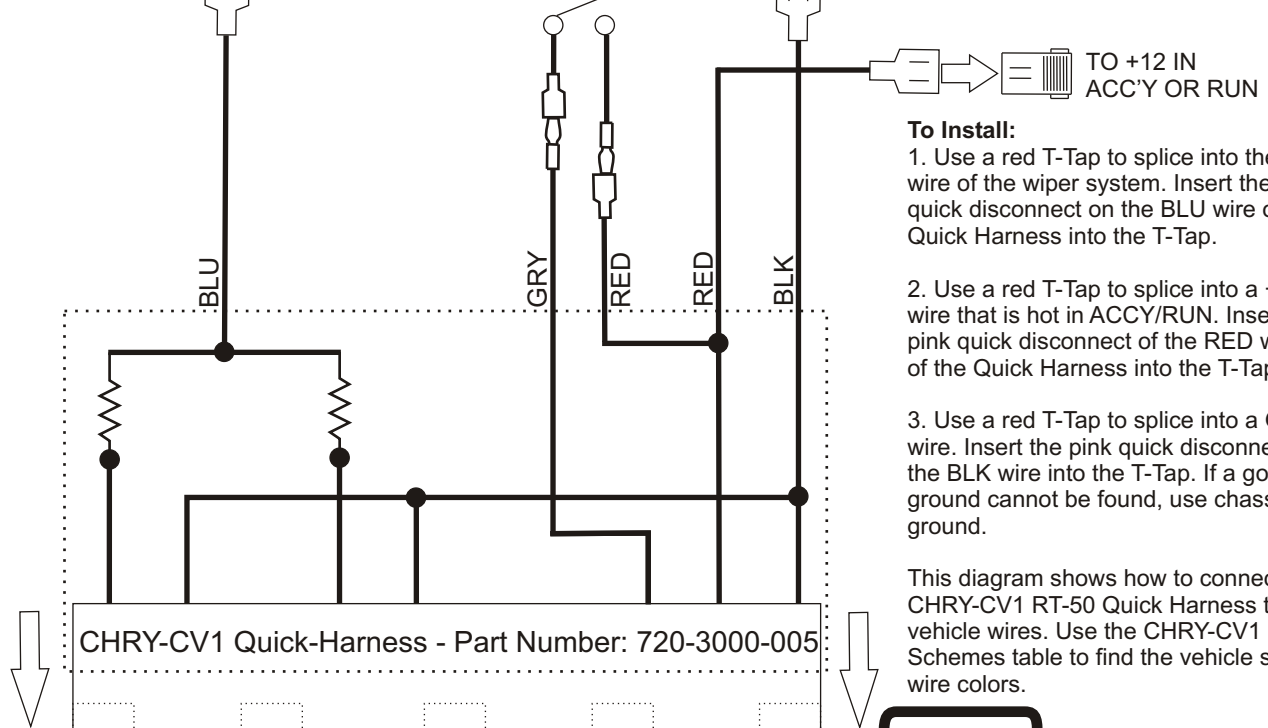


**To Install:**

1. Use a red T-Tap to splice into the MUX wire of the wiper system. Insert the pink quick disconnect on the BLU wire of the Quick Harness into the T-Tap.

2. Use a red T-Tap to splice into a +12V wire that is hot in ACCY/RUN. Insert the pink quick disconnect of the RED wire of the Quick Harness into the T-Tap.

3. Use a red T-Tap to splice into a GND wire. Insert the pink quick disconnect of the BLK wire into the T-Tap. If a good ground cannot be found, use chassis ground.

This diagram shows how to connect the CHRY-CV1 RT-50 Quick Harness to the vehicle wires. Use the CHRY-CV1 Color Schemes table to find the vehicle specific wire colors.

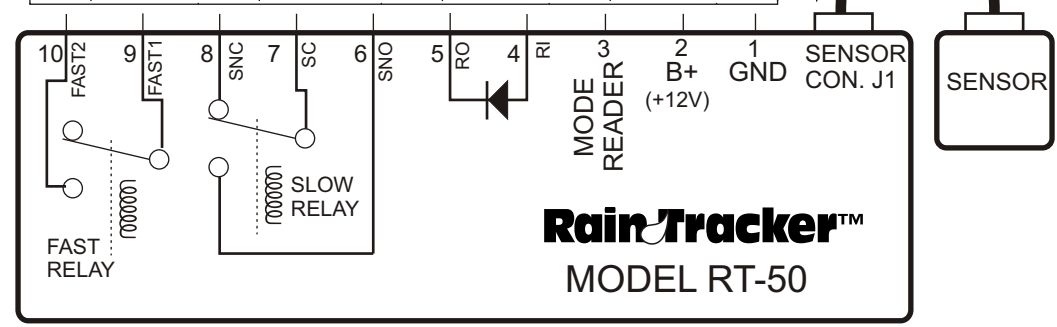

**RainTracker™**

Quick-Harness

MODEL: **QH-CV1**

RainTracker - CHRY-CV1 Quick Harness made specifically for the RainTracker model RT-50. For use only with CHRY-CV1 wiper systems.

Part # 720-3000-005