


Pink Quick Disconnect

ACTIVATION SWITCH

To Install:

1. Use a red T-Tap to splice into the FAST wire of the wiper system. Insert the pink quick disconnect on the PNK wire of the Quick Harness into the T-Tap.
2. Use a red T-Tap to splice into the MUX1 wire of the wiper system. Insert the pink quick disconnect on the BLU wire of the Quick Harness into the T-Tap.
3. Use a red T-Tap to splice into the MUX2 wire of the wiper system. Insert the pink quick disconnect on the GRN wire of the Quick Harness into the T-Tap.
4. Use a red T-Tap to splice into a +12V wire that is hot in ACCY/RUN. Insert the pink quick disconnect of the RED wire of the Quick Harness into the T-Tap.
5. Use a red T-Tap to splice into a GND wire. Insert the pink quick disconnect of the BLK wire into the T-Tap. If a good ground cannot be found, use chassis ground.

GM-LZ Quick- Harness - Part Number: 720-3000-002

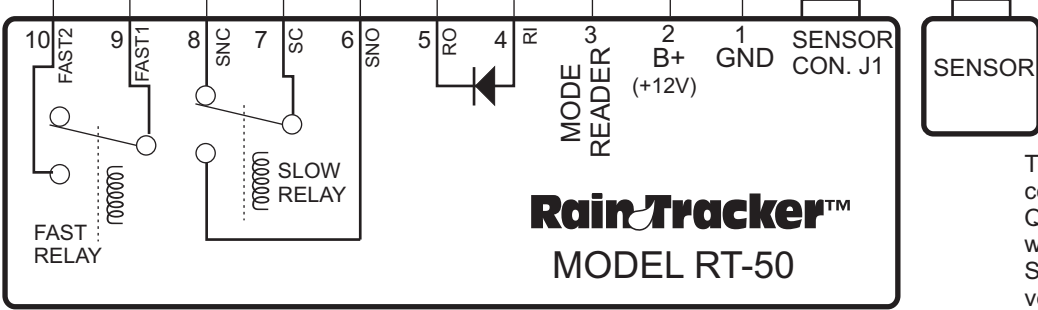

This diagram shows how to connect the GM-LZ RT-50 Quick Harness to the vehicle wires. Use the GM-LZ Color Schemes table to find the vehicle specific wirecolors.

MODEL: QH-GMLZ
RainTracker™
 RainTracker - GM-LZ Quick Harness made specifically for the RainTracker model RT-50. For use only with GM-LZ wiper systems.
 Part # 720-3000-002