


This diagram shows how to connect the HSS RT-50 Quick-Harness to the vehicle wires. Use the appropriate vehicle specific instructions, a factory service manual or multimeter to find the correct wire colors.

To Install:

1. Cut the SLOW wire of the wiper system. Connect the PPL wire of the Quick-Harness to the switch side of the SLOW wire and the BLU wire to the motor side of the SLOW wire
2. Use a red T-Tap to splice into the FAST wire of the wiper system. Insert the pink quick disconnect on the PNK wire of the Quick Harness into the T-Tap.
3. Use a red T-Tap to splice into a +12V wire that is hot in ACCY/RUN. Insert the pink quick disconnect of the RED wire of the Quick Harness into the T-Tap.
4. Use a red T-Tap to splice into a GND wire. Insert the pink quick disconnect of the BLK wire into the T-Tap. If a good ground cannot be found, use chassis ground.

MODEL: QH-HSS
RainTracker™
 RainTracker - HSS Quick Harness made specifically for the RainTracker model RT-50. For use with HSS wiper systems.
 Part # 720-3000-004

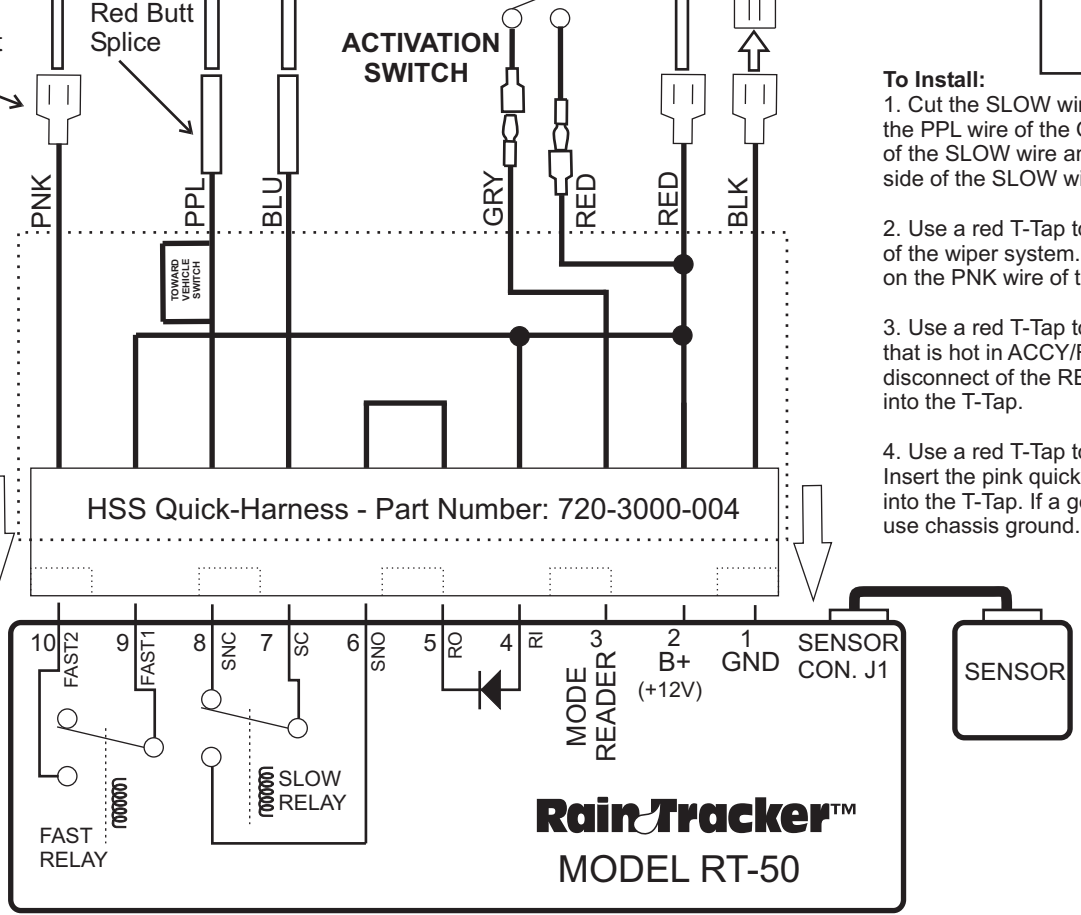

RainTracker™
 MODEL RT-50